



FLAME HORN COVER with WOLO HORNS

7298

PARTS INCLUDED

- 1 Wolo Horns and Bracket Assembly
- 1 Flame Horn Cover
- 1 Wolo Horn Relay
- 1 Hardware Kit Containing
 - 1 Dielectric Grease Packet
 - 6 Black Nylon Cable Ties
 - 1 Wiring Harness
- 1 Installation Instruction

Please read and understand entire instructions before starting installation

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Combination Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

CAUTION! Avoid potential electrical shock! Disconnect the battery before starting this procedure.

STEP 2 Remove the acorn nut and washer that secures the cowbell horn and cover to the bike. PIC 1 Retain acorn nut and washer for reinstallation. Disconnect the lead wires from the horn, located on the bottom side of the horn. Fully remove the horn from the bike.

STEP 3 Remove the seat or access panel to get to the battery. Connect the ring terminals on the new Horn Wiring Harness to the battery, RED wire to positive and BLACK wire to negative. PIC 2

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
 - Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn **WILL NOT** issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 4 Route the wires under the fuel tank to the horn mount.

STEP 5 Secure the wiring harness with the provided cable ties. Be certain the wires are away from any pinch points or direct heat.

ATTENTION! Küryakyn recommends the use of dielectric grease on electrical connections.

STEP 6 Connect the yellow wire from the new Wolo Horn Harness to the yellow wire on the bike's wiring harness. PIC 2 This was previously plugged into the OEM horn.

STEP 7 Connect the remaining WHITE wire from the Wolo Horn Wiring Harness to either male spade from the Wolo Horn. The black wire from the bike's harness connects to the other spade on the Horn. PIC 4 (Horn shown off the bike for clarity)

STEP 8 Secure the new Wolo Horn and bracket assembly to the bike with the stock washer and acorn nut (removed in Step 2). PIC 3 Fully tighten the acorn nut.

STEP 9 Under the seat, plug the horn relay on the new wiring harness to the relay connector located a few inches from the battery terminals.

NOTE: Wrapping the joint between the relay and the relay plug with electrical tape will help keep water and debris out.

ATTENTION! Secure the relay in a location so the terminals face down and it is protected from the elements (road grime, rain, or washing the bike).

STEP 10 With the relay in place, turn the key to check the horn function with the OEM handlebar mounted horn button. If you do not have horn function, review all connections.

STEP 11 Clean the inside top of the Flame Cover with an ammonia based cleaner such as window cleaner. Dry completely.





ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn **WILL NOT** issue a warranty on any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 12 Test fit the Flame Cover to the Wolo Horn and Bracket assembly. Line up the back edge of the Cover with the back edge of the Bracket. It should find it's place to sit. Rub the back on the adhesive strip on the Bracket assembly. Remove the backing. Install the Cover to the Wolo Horn and Bracket. Press firmly for one full minute. Full bonding will occur in 24 hrs. PIC 4

STEP 13 Replace the seat or access panel over the battery. Tighten all fasteners.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

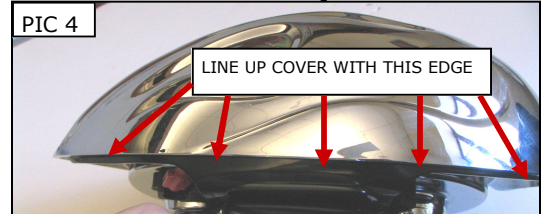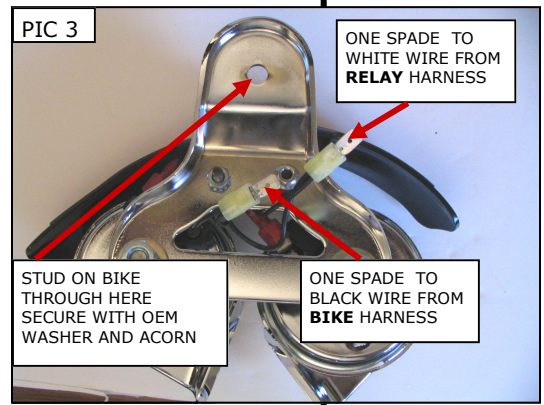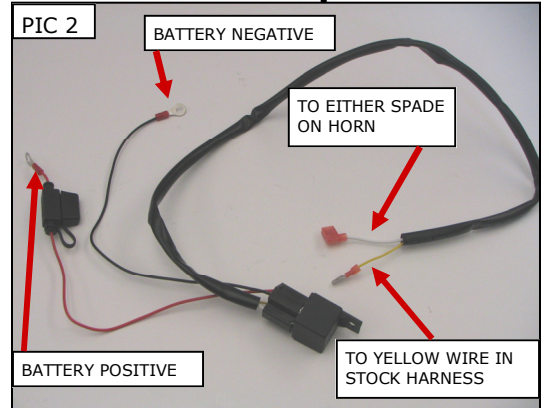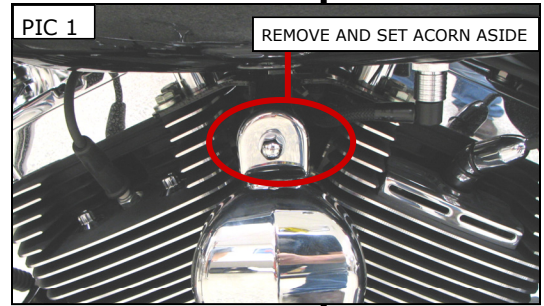

Ride On!